

PRECISION AG TUTORIAL

RTK SECURITY KEY IN AG REMOTE (252, 262, 332)

HOME SCREEN (BELOW)



FROM HOME SCREEN, PRESS THE RIGHT ARROW ">" UNTIL AT "CONFIGURATION" SCREEN (BELOW)



FROM "CONFIGURATION" SCREEN, PRESS DOWN "V" ONCE, THEN PRESS RIGHT ARROW ">" UNTIL "RTK CONFIG" SCREEN (BELOW)



FROM "RTK CONFIG" SCREEN, PRESS "V" UNTIL AT "PRESS (BOTTOM-LEFT ARROW) TO ENTER SECURE RTK KEYS" SCREEN (BELOW)



FROM "PRESS (BOTTOM-LEFT ARROW) TO ENTER SECURE RTK KEYS" SCREEN (BELOW), PRESS BOTTOM-LEFT ARROW UNTIL AT "KEY #1 KEY" SCREEN (BELOW)



PRESS ENTER (>) TO BRING UP THE CURSOR (BLACK SQUARE AT THE BEGINNING OF THE LETTER-NUMBER SEQUENCE) (BELOW). ENTER NUMBERS OR LETTERS BY THUMBING UP OR DOWN (WITH CENTER KEYS) AND THEN PRESSING ENTER (>) TO FIX INDIVIDUAL CHARACTERS. SEE EXAMPLE (SECOND SCREEN-SNAP BELOW). NOTE: YOU CAN ENTER UP TO 5 KEYS. WHEN FINISHED PRESS ENTER.



PRESS “V” UNTIL AT “KEY #1 DSCRIPT.” (BELOW) SCREEN AND THEN PRESS ENTER “>”



PRESS “V” UNTIL AT “KEY #1 EXPR. ON XX/XX/XXXX” (BELOW). CONFIRM THAT THE CORRECT DATE IS PRESENT.



PRESS "V" UNTIL AT "KEY #1 DELETE" SCREEN (BELOW). PRESS "V" TO CONTINUE. PRESS ENTER TO PROMPT CURSOR AND PROCEED IN DELETING KEY #1. IF DELETING, SELECT "YES" AND ENTER ">", THEN GO TO "KEY #1 KEY" SCREEN TO (RE)ENTER INFORMATION.



PRESS "V" UNTIL AT "KEY #1 KEY" SCREEN. CONFIRM CODE IS CORRECT. TO CHANGE CODE, GO TO "KEY #1 DELETE" SCREEN (ABOVE). PRESS "ESC" TO GO BACK TO HOME SCREEN.

